

Presentation Functions | At a Glance



■ PowerCom Shortcut Key:

Function Name	Available From	Shortcut
Next Action	Any Screen	Space Bar
S top Polling	Polling Screen	Space Bar or S
Connect B ase	Polling Screen	B
C ontinue Polling	Stop Screen	C
D isplay Chart	Stop Screen	D
Clear Data & R evote	Stop or Display Screen	R
Show / Hide A bsentee	Polling Screen	A
Start / Stop M usic	Polling Screen	M
Start / Stop T imer	Polling Screen	T
I mpromptu Questions	Stop or Display Screen or Non Polling Slide	I
W inners	Start From 1 st Question with Correct Answer	W
Change K eypad Settings	Any Slide	K
Demographic Cut	Display Screen	Alt + Numeric Key
View Priority	Display Screen of Priority Question	Ctrl + Numeric Key
Polling Detail L	Stop or Display Screen	L

- ▶ Right Mouse on Poller Box for all available action shortcuts.
- ▶ To display Demographic Analysis, use **Alt + 1** to **Alt + 9** to switch Demographic question.
- ▶ To display Priority answer in sequence, use **Ctrl + 1** to **Ctrl + 9** to display Priority answer choices.

■ After Polling stops or results are displayed, you can use these useful PowerPoint shortcut keys during the slide show for slides with Poller :

Function Name	Shortcut
First Slide	Home, 1+ Enter
Last Slide	End
End The Slide Show	ESC , CTRL + BREAK, or HYPHEN
Next Slide	Page Down
Previous Slide	Page Up
Next Action	Space Bar or Next Arrow or Down
Display / Close A Black Screen	B or PERIOD
Display / Close A White Screen	W or COMMA

Note:





1. PowerCom strongly recommends "Dual Monitor with Presenter's view" for slide shows. Please review Dual Monitor with Presenter's view help topics before using Dual Monitor display.
2. During the polling all shortcut keys are disabled except SpaceBar and PowerCom applicable shortcut keys.
3. When slide loses focus, the shortcut keys may not work properly. In such a situation, click the slide to gain focus, and then use the shortcut key again.
4. **Customized Animation on Question Slides:**
Use with caution and use more of "With Previous" and "After Previous" than "On Click" as Start of animation.



View and Change Address Mode | Keypad No. | Channel No.



Notes for Reply Plus:

1. Do not connect keypad to base when change the settings.
2. Press Base key  and DEL key  simultaneously to access keypad menu, pressing the soft key right  and left  button to locate the menu item.

View and Change Address Mode:

Note: Turn the keypad power on then off after changing address mode to alter the settings.

	Address Mode	View Keypad Mode	Change Keypad Mode
Keypad Plus	Static mode	When power on keypad, LCD will display Welcome and keypad ID.	Enter keypad menu, locate keypad Mode to set address Mode.
	Dynamic mode	When power on keypad, LCD will display "Searching For Bases..."	
Keypad Mini+	Static mode	Use WRS960X-T trainer See note below:	Use WRS960X-T trainer
	Dynamic mode		

View and Change Keypad No.:

	Address Mode	View Keypad No.	Change Keypad No.
Keypad Plus	Static mode	When Power on keypad, LCD will display Keypad ID	Enter keypad menu, use Softkeys to locate Address. Use Numeric keys to assign Keypad #. Press SEND to save.
	Dynamic mode	When Power on keypad, and Base connected, press Base key.LCD will display keypad ID	System will automatically assign Keypad ID after the user selects the channel.
Keypad Mini+	Static mode	Use WRS960X-T trainer	Use WRS960X-T trainer
	Dynamic mode		System will automatically assign Keypad ID after user Dynamic mode selects the channel

View and Change Keypad Channel:

	Address Mode	View Keypad Channel	Change Keypad Channel
Keypad Plus	Static mode	When power on keypad, press Base key LCD will display keypad Channel.	Enter keypad menu, Use Softkey to locate Base ID. Use Numeric keys to set up Keypad #, then use SEND to save.
	Dynamic mode		System will automatically display all available channel IDs. User selects the channel and presses SEND key or middle softkey to connect.
Keypad Mini+	Static mode	Use WRS960X-T trainer	Use WRS960X-T trainer
	Dynamic mode		Press LINK key, then enter 2 digit channel ID, then press SEND key.

- **Address Mode:** *Both the base and the keypads must be configured to the same mode, or they will not be able to communicate with eachother.*

Note: Use WRS960X-T Trainer to view and change Reply Mini+ Keypad Mode, Base ID and address Mode.

