

## Reply Plus Keypad WRS7200 and Base WRS970/971 | Quick Reference



**Power on keypad:** Press Power Key

### I. LCD Display

**CH:** This shows the channel number you are on.

**ID:** This shows your keypad's ID number.

**Battery:** This displays your battery life.

**123:** Question type. (See 5. a)



1. **Check and X:** A check indicates that you answered correctly. An X on the display means that you answered incorrectly.
2. **Key:** A key symbol on the screen signifies that the base station requires a login password.
3. **Up and down half arrows:** The up arrow specifies that the keypad is transmitting information to the base station. The down arrow specifies that the base station is transmitting information to the keypad.
4. **Reception:** This shows how strong your reception to the base station is.

### II. How to access the LCD keypad menu:

1. Press the base key and DEL key simultaneously to access the keypad menu. Press the soft key right and left button to locate the menu item.
2. Press middle soft key to enter, select the setting and press SEND to save.
3. Press DEL key to return to the main menu.

**Note:** Do not connect keypad to base when keypad settings are being changed.




### III. Address Mode: Both the base and the keypads must be configured to the same mode, as they are not interoperable.



**Note:** Power off and then on keypad again after address mode is changed to alter the settings.

**1. Static Address mode:** When keypad is powered on, the LCD displays Welcome and keypad ID.

- a) You have to configure Base ID and Keypad Address for every keypad BEFORE usage.
- b) You have to configure Base ID and Keypad Address for every keypad BEFORE usage.

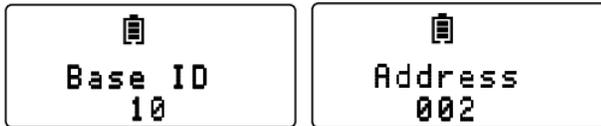

- c) The keypad channel must match the base channel. Press SEARCH key to display the Channel and Keypad address.
- d) To vote, simply power on the keypad and vote.

**2. Dynamic Address mode:** When keypad is powered on, LCD displays "Searching For Bases..."

- a) System will automatically display all available channel ID, user should select the channel and press SEND key or middle soft key to connect.
- b) **Search Base:** Press Base Key then use the left and right soft keys to find the base channel ID you want to connect to. Press Send or middle soft key to connect to the base station.

**IV. Login:** When login is enabled, enter the password and press Send key to login. If the password entered is correct the Keypad LCD will display "Authorizing" then "Connected". If the entered password is in error Keypad LCD will display "Login Retry:"

**V. How to vote:**

- 1. Answer the question depending on the question types:
  - a) **Visual clue of question type:** On the LCD display to the right of the battery symbol, if you see a display "1" then you need to answer a single digit or single alpha question. If you see a display "123" then you need to answer a multi-digit type question. If this display is not there then it indicates that you need to answer a soft key type question.

**b) Soft key questions:** Use soft keys

**c) Single digit and Single Alpha questions:** Use Numeric keys or A - E.



**d) For Multi-digit questions including Multi AlphaNumeric, Range, Free Form and Priority, press Send key to submit your answer. Use \*SYM key to separate multiple selections such as Multi Alpha Numeric and Priority.**

**2.** Use the Delete key (Del) to delete any characters input into the display. This Delete Key also acts as a cancel button for prompts or for exiting menus.

**3.** If you need to enter more than 12 characters answer, enter up to 12 characters then press Enter key. Then enter a "\*SYM" key as a first character on the Keypad LCD as prefix for the next answer string. All characters following the initial \* will be appended to the previously sent answer string. Press Send key to submit the second answer string. You can continue using "\*SYM" as prefix to append to the previous answer.

**VI. Base station settings**

(Please refer to PowerCom Reply Plus online help for detail settings)

**VII. Multi-site meeting base station connection using WRS970**

- 1. WRS970 is equipped with both USB and Ethernet connections. Ethernet connection enables multi-site meeting. WRS971 USB stick base has only USB connection, therefore it has no multi-site meeting capacity.
- 2. You must use Power-over-Ethernet (PoE) power adopter to provide power source.
- 3. You must configure an IP address for the base station at remote site to enable remote site base station connection.
- 4. See PowerCom Reply Plus online help for detailed set up procedure.