

## Presentation Functions | At a Glance



### ■ PowerCom Shortcut Key:

Function Name	Available From	Shortcut
Next Action	Any Screen	Space Bar
<b>S</b> top Polling	Polling Screen	Space Bar or S
Connect <b>B</b> ase	Polling Screen	B
<b>C</b> ontinue Polling	Stop Screen	C
<b>D</b> isplay Chart	Stop Screen	D
Clear Data & <b>R</b> evote	Stop or Display Screen	R
Show / Hide <b>A</b> bsentee	Polling Screen	A
<b>I</b> mpromptu Questions	Non Polling Screen	I
Start / Stop <b>M</b> usic	Polling Screen	M
Start / Stop <b>T</b> imer	Polling Screen	T
<b>W</b> inners	Start From 1st Question with Correct Answer	W
Polling Detai <b>L</b>	Stop or Display Screen	L
Demographic Cut	Display Screen	Alt + Numeric Key

- ▶ Right Mouse on Poller for all available action shortcuts.
- ▶ To display Demographic Analysis, use **Alt + 1** to **Alt + 9** to switch Demographic question.

### ■ After Polling Stop or result displayed, you can use these useful PowerPoint shortcut keys during the slide show for slides with Poller:

Function Name	Shortcut
First Slide	Home
Last Slide	End
End The Slide Show	ESC , CTRL + BREAK, or HYPHEN
Next Slide	Page Down
Previous Slide	Page Up
Next Action	Space Bar or Next Arrow or Down
Display / Close A Black Screen	B or PERIOD
Display / Close A White Screen	W or COMMA

### Notes:

1. PowerCom strongly recommends "Dual Monitor with Presenter's View" for slide show. Please review Dual Monitor with Presenter's view help topics before using Dual Monitor display.
2. During the polling all shortcut keys are disabled except SpaceBar and PowerCom applicable shortcut keys.
3. When slide loses focus, the shortcut keys may not work properly. In such a situation, click the slide to gain focus and then use shortcut key again.
4. **Customized Animation on Question Slides:** Use with caution and use more of "With Previous" and "After Previous" than "On Click" as Start of animation.





## View and Change Reply Keypad No. & View and Change Channel No.

### ■ View and Change Keypad No.:

	View Keypad No.	Change Keypad No.
Reply Worldwide	Hold Clr + 1 Release Clr, Enter * or Hold Clr + 9 5 1 Release Clr, Enter *	Hold Clr + 9 5 1 Release Clr, enter keypad as 3 digits
Standard Reply (Synthesized Keypad)	Hold Clr until it blinks, then let go, keypad shows as 3 digits.	Hold Clr until it blinks, then let go, enter keypad as 3 digits
Standard Reply (Non-Synthesized Keypad)	Hold Clr until it blinks then let go, keypad shows as 3 digits	Hold Clr until it blinks, then let go, enter keypad as 3 digits
Reply Mini	Use WRS960X-T trainer or See note below:	Use WRS960X-T trainer

### ■ View and Change Channel No.:

	View Channel	Change Channel
Reply Worldwide	Hold Clr + 2 Release Clr, Enter * or Hold Clr + 9 7 3 Release Clr, Enter *	Hold Clr + 9 7 3 Release Clr, enter keypad as 2 digits
Standard Reply (Synthesized Keypad)	Hold Clr + 9 7 3	Hold Clr + 9 7 3 Release Clr, enter keypad as 2 digits
Standard Reply (Non-Synthesized Keypad)	Hold Clr + 9 7 3	Can not change
Reply Mini	Use WRS960X-T trainer or See note below:	Use WRS960X-T trainer

#### NOTE: Reply Mini view Keypad Number and Channel:

Press the 1 and 5 keys simultaneously for 3 seconds.

A green LED flash represents the numerical values separated by the red LED indicator.

For details, please see online help topic "How to use Reply Mini with PowerCom Reply Worldwide."

► You can change **Base Station Channel** via using PowerCom:

1. Start PowerPoint, Click "Start a Base station" sub menu from PowerCom menu.
2. Plug in base station USB cable to your computer, then click "Find Base Station" button.
3. After PowerCom locate the base station, simply change the channel number, then press enter.  
Now the channel is changed.

